

# PARTS LIST OF DIESEL ENGINE GENERATOR SET


AT3LE

AT4LE

AT6LE




## Overall view of engine generator assembly

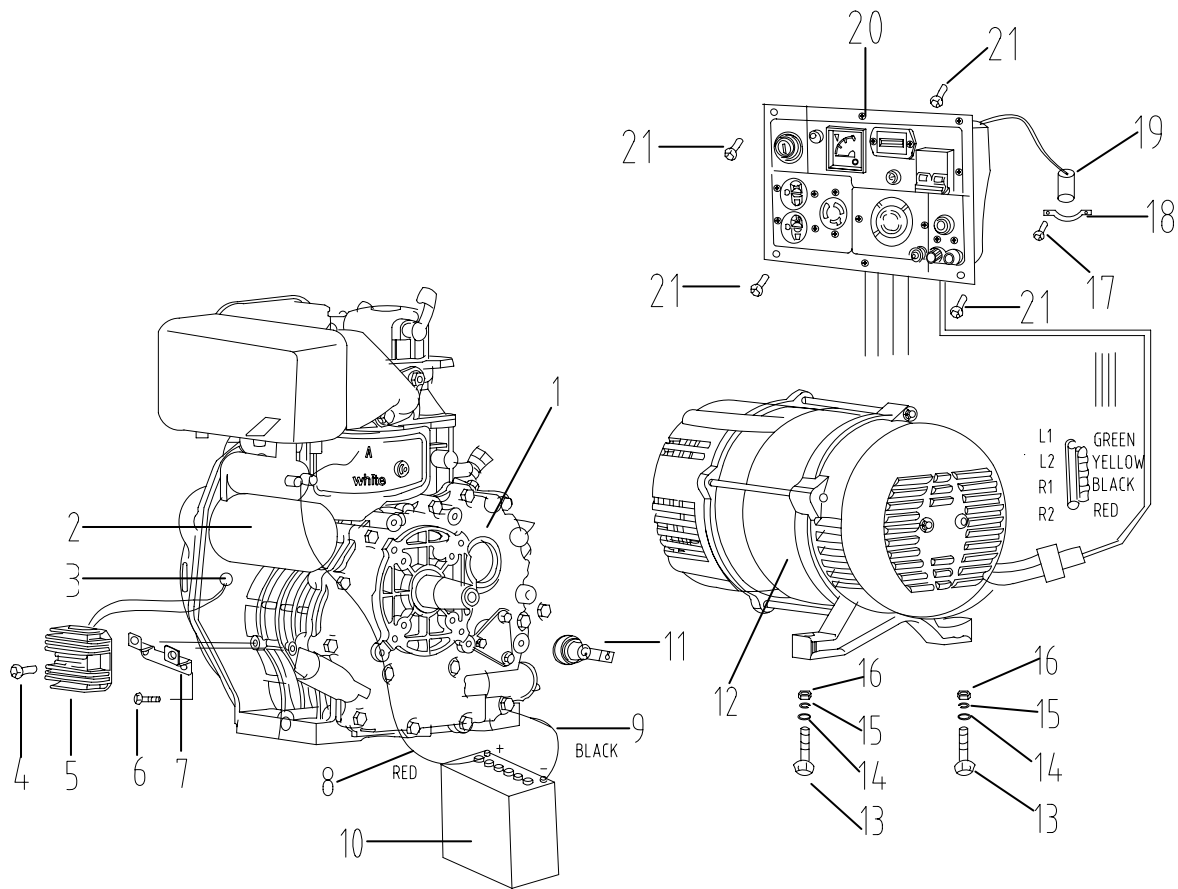

Nuber	Part nuber	Description	Qty.
1	3LE001/4LE001/6LE001	Engine generayor	1
2	3LE002/4LE002/6LE002	Starter motor	1
3	3LE003/4LE003/6LE003	Flywheel motor	1
4	3LE004/4LE004/6LE004	Bolt of voltage regulator	2
5	3LE005/4LE005/6LE005	Voltage regulator	1
6	3LE006/4LE006/6LE006	Bolt of voltage regulator bracker	2
7	3LE007/4LE007/6LE007	Voltage regulator bracker	1
8	3LE008/4LE008/6LE008	Battery cable(red)	1
9	3LE009/4LE009/6LE009	Battery cable(black)	1
10	3LE010/4LE010/6LE010	Battery	1
11	3LE011/4LE011/6LE011	Oil level sensor	1
12	3LE012/4LE012/6LE012	Generator	1
13	3LE013/4LE013/6LE013	Bolt	2
14	3LE014/4LE014/6LE014	Washer	2
15	3LE015/4LE015/6LE015	Spring washer	2
16	3LE016/4LE016/6LE016	Nut	2
17	3LE017/4LE017/6LE017	Bolt of capacitor	1
18	3LE018/4LE018/6LE018	Capacitor bracker	1
19	3LE019/4LE019/6LE019	Capacitor	1
20	3LE020/4LE020/6LE020	Output panel assembly	1
21	3LE021/4LE021/6LE021	Bolt of output panel assembly	4


## Frame assembly

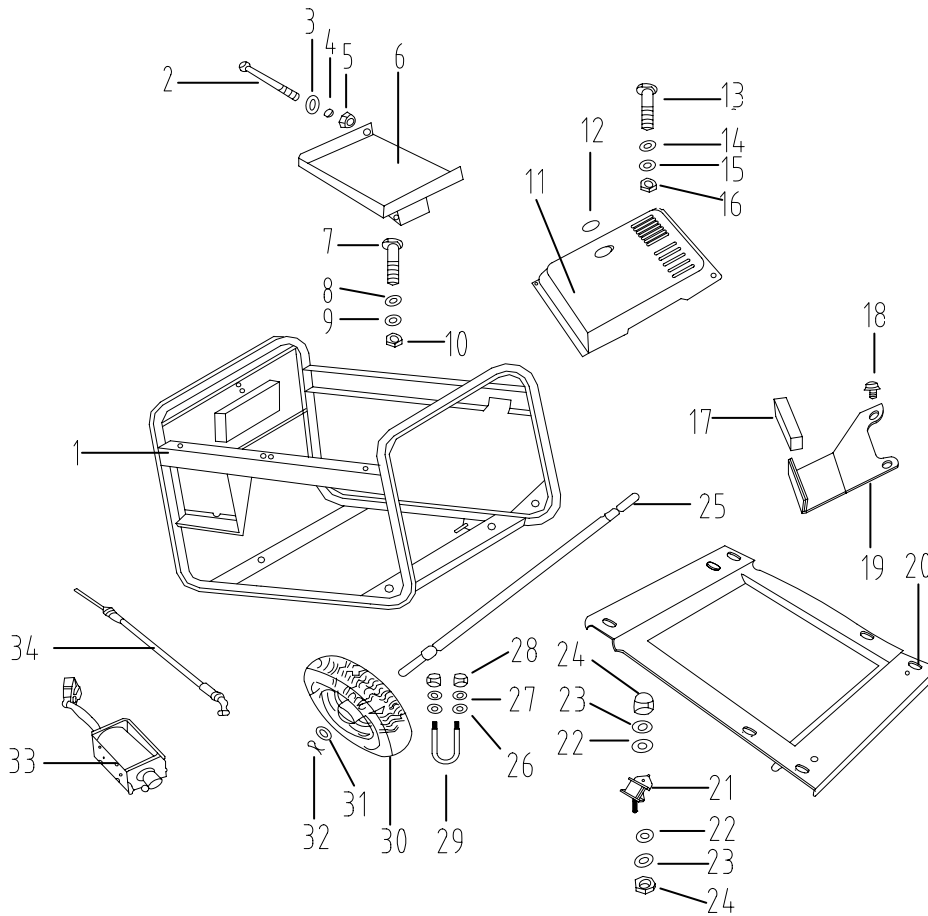

Nuber	Part nuber	Description	Qty.
1	3LE022/4LE022/6LE022	Frame	1
2	3LE023/4LE023/6LE023	Bolt	1
3	3LE024/4LE024/6LE024	Washer	1
4	3LE025/4LE025/6LE025	Spring washer	1
5	3LE026/4LE026/6LE026	Nut	1
6	3LE027/4LE027/6LE027	Battery tray	1
7	3LE028/4LE028/6LE028	Bolt	1
8	3LE029/4LE029/6LE029	Washer	1
9	3LE030/4LE030/6LE030	Spring washer	1
10	3LE031/4LE031/6LE031	Nut	1
11	3LE032/4LE032/6LE032	Decorative cover	1
12	3LE033/4LE032/6LE033	Rubber cover	1
13	3LE034/4LE034/6LE034	Bolt	4
14	3LE035/4LE035/6LE035	Nylon washer	4
15	3LE036/4LE036/6LE036	Flat washer	4
16	3LE037/4LE037/6LE037	Shock absorber	4
17	3LE038/4LE038/6LE038	Rubber absorber	1
18	3LE039/4LE039/6LE039	Bolt	2
19	3LE040/4LE040/6LE040	Plate connecting engine and frame	1


20	3LE041/4LE041/6LE041	Carrier frame	1
21	3LE042/4LE042/6LE042	Rubber mount	4
22	3LE043/4LE043/6LE043	Washer	8
23	3LE044/4LE044/6LE044	Spring washer	8
24	3LE045/4LE045/6LE045	Nut	8
25	3LE046/4LE046/6LE046	Axle	2
26	3LE047/4LE047/6LE047	Washer	8
27	3LE048/4LE048/6LE048	Spring washer	8
28	3LE049/4LE049/6LE049	Nut	8
29	3LE050/4LE050/6LE050	U bolt	4
30	3LE051/4LE051/6LE051	Wheel	4
31	3LE052/4LE052/6LE052	Flat washer	4
32	3LE053/4LE053/6LE053	Split pin	4
33	3LE054/4LE054/6LE054	Magnet	1
34	3LE055/4LE055/6LE055	Throttle cable	1

## Control panel assembly

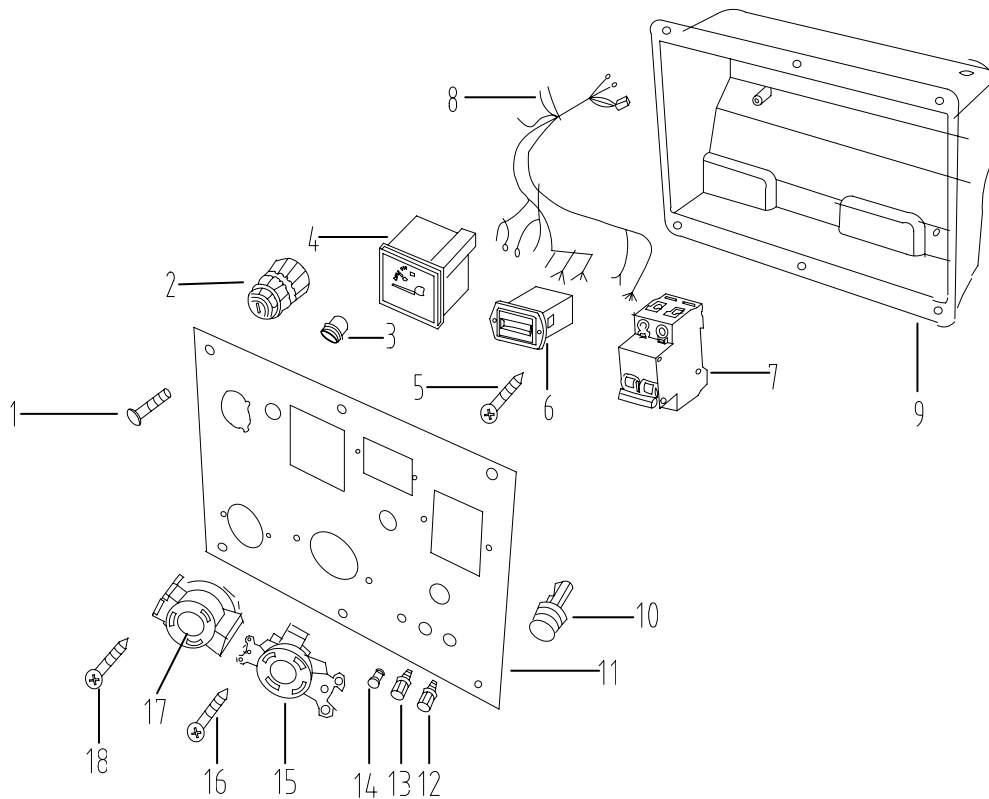

Nuber	Part nuber	Description	Qty.
1	3LE056/4LE056/6LE056	Bolt of control panel	4
2	3LE057/4LE057/6LE057	Starter switch	1
3	3LE058/4LE058/6LE058	Oil alert lamp	1
4	3LE059/4LE059/6LE059	Voltmeter	1
5	3LE060/4LE060/6LE060	Nut of hour meter	2
6	3LE061/4LE061/6LE061	Hour meter	1
7	3LE062/4LE062/6LE062	Breaker bracket	1
8	3LE063/4LE063/6LE063	Wiring harness	1
9	3LE064/4LE064/6LE064	Electrical box	1
10	3LE065/4LE065/6LE065	DC fuse	1
11	3LE066/4LE066/6LE066	Electric panel	1
12	3LE067/4LE067/6LE067	Positive DC port	1
13	3LE068/4LE068/6LE068	Negative DC port	1
14	3LE069/4LE069/6LE069	Grounded bolt	1
15	3LE070/4LE070/6LE070	Socket I	1
16	3LE071/4LE071/6LE071	Bolt of socket	2
17	3LE072/4LE072/6LE072	Socket II	1
18	3LE073/4LE073/6LE073	Bolt of socket	2

## Fuel tank assembly

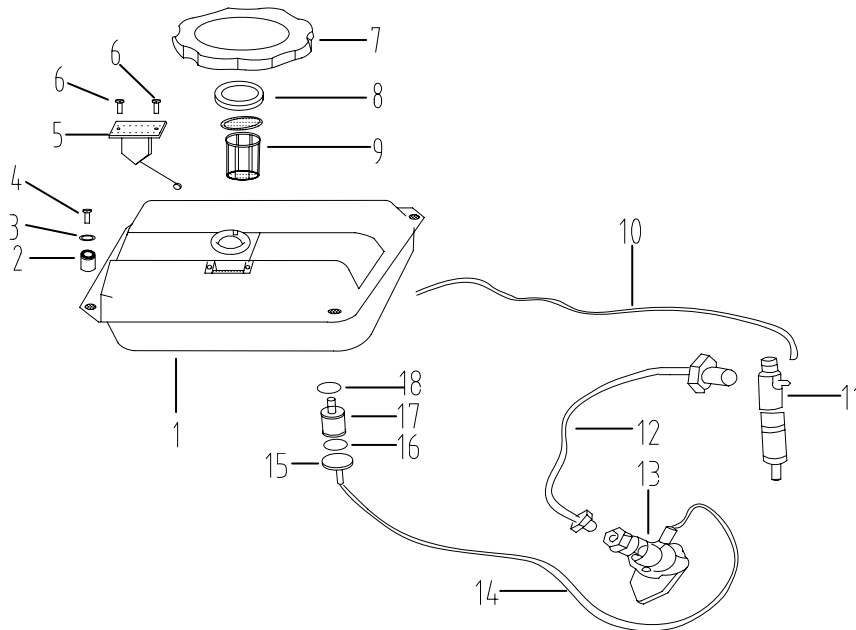

Nuber	Part nuber	Description	Qty.
1	3LE074/4LE074/6LE074	Fuel tank	1
2	3LE075/4LE075/6LE075	Shock absorbing gasket	4
3	3LE076/4LE076/6LE076	Nylon washer	4
4	3LE077/4LE077/6LE077	Bolt of fuel tank	4
5	3LE078/4LE078/6LE078	Fuel lever indicator	1
6	3LE079/4LE079/6LE079	Bolt of fuel lever indicator	2
7	3LE080/4LE080/6LE080	Fuel tank cap	1
8	3LE081/4LE081/6LE081	Seal	1
9	3LE082/4LE082/6LE082	Filtering cup	1
10	3LE083/4LE083/6LE083	Fuel overfill pipe	1
11	3LE084/4LE084/6LE084	Fuel injector	1
12	3LE085/4LE085/6LE085	High pressure fuel pipe	1
13	3LE086/4LE086/6LE086	High pressure fuel pump	1
14	3LE087/4LE087/6LE087	Fuel line	1
15	3LE088/4LE088/6LE088	Fuel filter cover	1
16	3LE089/4LE089/6LE089	O ring seal	1
17	3LE090/4LE090/6LE090	Fuel tank filter	1
18	3LE091/4LE091/6LE091	O ring seal	1